

# **KOMS 6610**

## **Instructions for use**



FOR THE WAY IT'S MADE.®



<b>Installing the built in / under the counter column oven</b>	<b>4</b>
<b>Safeguarding the environment</b>	<b>6</b>
<b>Warnings</b>	<b>6</b>
<b>Before using the oven</b>	<b>7</b>
<b>Oven accessories</b>	<b>8</b>
<b>Care and maintenance</b>	<b>9</b>
<b>Troubleshooting guide</b>	<b>11</b>
<b>After Sales Service</b>	<b>11</b>

# Installing the built in / under the counter column oven

## Recommendations

**Important: the oven should be disconnected from the mains during installation or maintenance work.**

- Only a qualified electrician can install the oven in compliance with the manufacturer's instructions and applicable local regulations.
- Once you have unpacked the oven, check that the appliance has not been damaged during transportation and that the door closes properly. **If you have any doubts, contact the Customer Care Centre.**
- Once you have unpacked the oven, leave it resting on the polystyrene base to prevent damaging it.
- Wear protective gloves when installing the oven.
- Lift the oven up using the specific openings on each side and never using the door handle.

## Preparing the housing unit

- The kitchen units coming into direct contact with the oven must be heat resistant (min. 80°C).
- Cut the unit before installing the appliance. Carefully remove any dust and shavings that could compromise the appliance's working order.
- The oven and unit sizes are shown in figs. 1-2-3.
- To ensure correct ventilation, leave an opening at the bottom of the unit (following the sizes in the diagram).

**When installation has been completed, the bottom of the oven must be inaccessible.**

- Make sure the oven walls do not come into direct contact with adjacent units when you are installing it (fig 4-5).

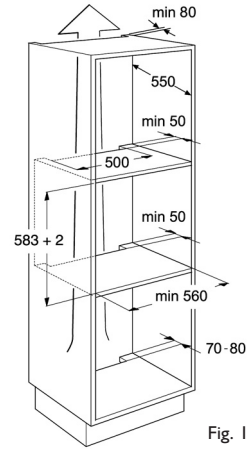 


Fig. 1

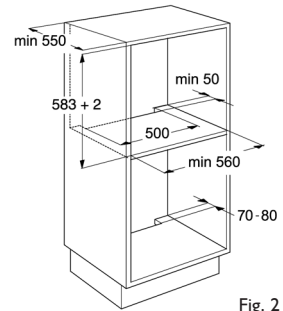 


Fig. 2

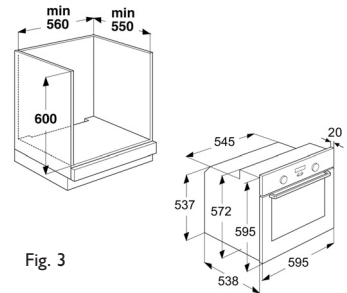 


Fig. 3

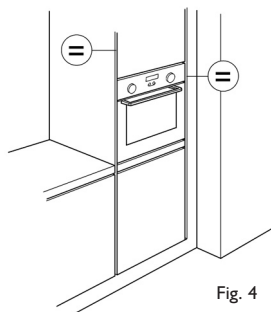 


Fig. 4

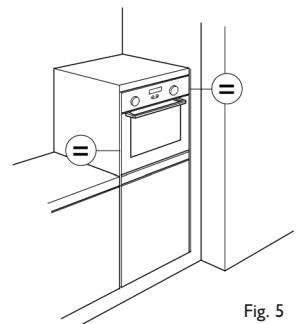 


Fig. 5

# Installing the built in / under the counter column oven

- With ovens installed under worktops, there must be a minimum slot of 5mm between the upper border of the oven and the lower border of the worktop. (fig. 6). **In order for the appliance to work properly, this slot should never be closed.**
- If the unit is not securely fixed to the wall, it must be anchored with standard brackets (G) (fig. 7).

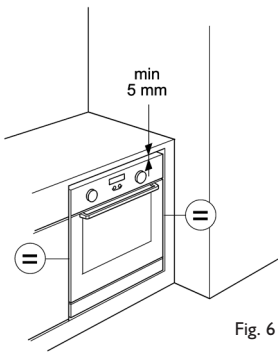 


Fig. 6

## Electrical connection

Regulations require that the appliance must be earthed. The electrical connection must be made by a qualified electrician in compliance with the manufacturer’s instructions and applicable local regulations.

- The installer is responsible for making a proper electrical connection and complying with safety standards.
- The power cable must be long enough to connect the appliance fitted into the unit, to the mains supply.
- In compliance with safety standards, a multi-pole switch with a minimum contact gap of 3mm must be used during installation.
- Do not use multiple plug adaptors or extension leads.
- The electrical parts should be inaccessible after installation.

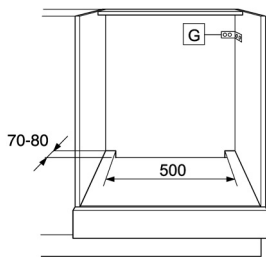 


Fig. 7

## Connecting the oven to the power supply

- Make sure that the voltage indicated on the rating plate matches the network voltage. The rating plate is on the front edge of the oven (visible with the door open).
- If the oven has no power cable, proceed as follows:
  1. Unscrew the two fixing screws on the terminal box cover found on the lower part of the oven’s back cover.
  2. Remove the cover to access the terminal box and insert the power cable (see table) through the opening on the bottom of the oven.
  3. Connect the cable to the terminal box tightening the screws as far as they can go and attaching it to the cable fastner.
  4. Replace the cover by inserting the two blades into the slots and fasten it with the two screws.

## Power supply cable table

No. of conductors	Type of cable
1N+ ~	H05 RR-F 3 X 1,5 mm <sup>2</sup>
2+ ~	H05 RR-F 3 X 1,5 mm <sup>2</sup> (Switzerland only)


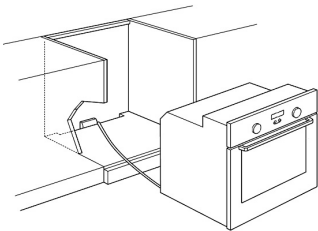 


Fig. 8


## Securing the oven

 - Lift up the oven using the two openings on either side and insert it into the housing unit, making sure you do not get the power cable trapped (fig. 8).
- Centre the oven in the housing unit before securing it.
- Anchor the oven to the housing unit using the screws provided.

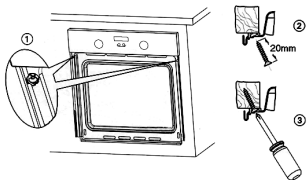

# Safeguarding the environment

## Disposing of packaging


- The packing material can be 100% recycled as confirmed by the recycling symbol .
- The various pieces of packaging should not be disposed off into the environment but disposed of in compliance with local authority standards.



## Disposal of old appliances

- The appliances are made with recyclable or re-usable material. Disposal must be carried out in accordance with local environmental regulations for waste disposal. Cut the power cable to make them unusable before disposing of them.

## Product

- This appliance is marked according to the European Directive 2002/96/EC, Waste Electrical and Electronic Equipment (WEEE).
- By ensuring that this product is disposed of correctly, you will help prevent potentially negative consequences for the environment and human health.
- The symbol  on the product or on the documents accompanying the product indicates that this appliance should not be treated as household waste. Instead, it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information on treatment, recovery and recycling of this product, contact your local authority, the household waste disposal service or the shop where you purchased the product.

## Energy saving

- Only preheat the oven if indicated in the product description sheet cooking table or in your recipe.
- Use dark, black lacquered or varnished oven moulds because they absorb heat much better.

## Warnings

- This appliance is not intended for use by persons (including children) with reduced physical, sensor or mental capabilities or lack of experience and knowledge unless they have been given initial supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The oven is for home use and the cooking of food only. No other use is allowed. The Manufacturer denies all responsibility for improper use or for the incorrect setting of the controls.
- Only a qualified electrician can carry out repair work or maintenance.
- Avoid exposing the oven to atmospheric agents.
- Do not place heavy items on the door as this could damage the oven opening and the hinges.
- Do not hang onto the door.
- Do not hang anything on the oven door handle.
- **Do not cover the bottom of the oven with aluminium foil or other objects.**
- The oven door must shut properly. Keep the door seal surfaces clean.
- Never pour water directly into a hot oven. The varnish could get damaged.
- Fruit juices that drip from a tray could leave indelible marks. We would advise you to clean the oven before using it again.
- Do not drag pots or pans across the bottom of the oven as this could scratch the surface.

## Warnings

- Residual condensation after the last use, could over time, damage the oven and the surrounding units.  
We advise you to:
  - always use the lowest temperature;
  - cover the food;
  - remove the food from the oven when cooked;
  - dry the damp parts of the cold oven.
- The oven screen and door handle heat up when the appliance stays on for a long period of time at a high temperature.
- Never touch the oven with any wet part of the body or operate it with bare feet.
- Do not pull the appliance or power cable to disconnect it from the socket.
- Keep children away from:
  - the oven and its controls, especially during or just after use, to prevent injury;
  - packaging (bags, polystyrene, metal parts, etc.)
  - the oven when scrapped.
- Make sure the wiring from other appliances in use near the oven do not come into contact with hot parts of the oven and do not get trapped in the oven door.
- The oven is fitted with an air cooling system to prevent the front part and the cabinet cavity from reaching excessively high temperatures..

**Attention:** steam and smoke are vented through an opening between the control panel and the oven door. Do not obstruct the vent opening.

- Do not place inflammable material in the oven or near it: if the appliance is inadvertently turned on, a fire could start.
- Use oven gloves to remove hot pans and accessories in the oven.
- If you are adding alcohol (e.g. rum, cognac, wine etc.) while roasting meats or baking cakes, remember that alcohol evaporates at a high temperature. You should, therefore, bear in mind that the vapours released by the alcohol can ignite when they come into contact with the electrical heating element.
- Do not heat up or cook food in sealed containers inside the oven. The pressure that builds up inside the container could explode, damaging the oven.
- Do not use containers made of synthetic material to cook (except ones specifically designed for this purpose; see information provided by the Manufacturer). They could melt at high temperature.
- Keep an eye on what you are cooking if you are using a lot of fat or oil. The oil and fat could overheat and cause a fire!
- Never pull out fully loaded shelves. Use extreme caution.

## Before using the oven

- Before use, remove:
  - stickers on the front of the oven and the door with the exception of the rating plate.
  - cardboard protection and protective plastic film from the control screen and other parts of the oven
  - any sticky labels from accessories (for example, under the dripping pan).
- Remove the accessories from the oven and heat it up at 200°C for approx. one hour to eliminate smells and fumes produced by insulating material and protective greases. You should keep the window open when doing this.

# Oven accessories

The accessories vary according to the model. The accessories provided with the oven are listed in the separate Product Description Sheet (under Accessories).

## Drip tray (1)

Placed under the grid to collect grease or pieces of food or used as a plate, for example, to cook meat, chicken, fish with or without vegetables. Pour some water into the dripping pan to prevent fat spatters or smoke.

## Baking tray (2)

For baking biscuits, cakes and pizzas.

## Wire shelf (3)

For cooking food or as a support for pots, cake tins and any other cooking receptacles. It can be placed on any of the runners in the oven. The wire shelf can be inserted with the curved side upwards or downwards.

## Turnspit (4)

See relative chapter in the separate Product Description Sheet for use.

## Kit "Grill Pan Set" (5)

The set includes a trivet, an enamel drip tray and a handle. The Grill pan should be placed on the wire shelf and used with the Grill function

## Grease filter (6)

For use only with particularly fatty cooking. Hook onto the rear wall of the cavity in front of the fan. It can be washed in the dishwasher and should not be used with the 'Fan' option as the filter will effect the cooking results.

## Heat probe for meat (7)

 
 
 
 
 
For measuring the temperature inside the food to establish if it is cooked.

## Sliding runners (8)

Make manual intervention easier during cooking, allowing you to partially pull out the wire shelves and dripping pans. They fit all the accessories.

## Dehydration rack (9)

To dry any kind of fruit, vegetable and mushrooms.

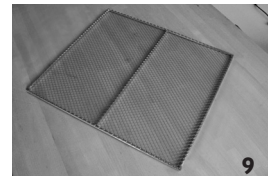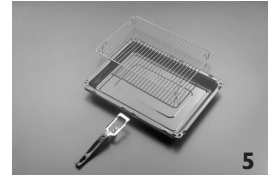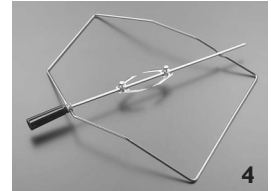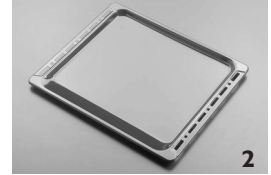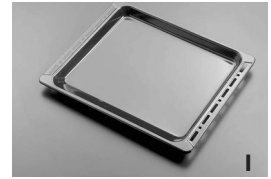



## Care and maintenance

**Important:** Do not use water pressure cleaners or steam cleaners.

### Oven exterior and internal frame of the oven

- Clean with a damp cloth. If it is very dirty, add a few drops of washing up liquid to the water. Wipe with a dry cloth.
- Do not use corrosive or abrasive cleaning products, which could dull the surface. If one of these products should accidentally come into contact with the oven, clean it with a damp cloth immediately.
- Slight differences in colour in the front part of the appliance are due to different materials such as glass, plastic and metal being used.



 
### Accessories

- Soak the accessories in water with washing up detergent immediately after use. Food residues can be easily removed using an appropriate brush or a sponge.




### Oven cavity

- Do not use abrasive sponges or pan scourers. Use specific cleaning products for ovens and follow the manufacturer's instructions.
- Leave the oven to cool after each use then clean it to prevent ingrained dirt forming as a result of residue food.
- During prolonged cooking or cooking on several levels, especially in the case of food with a high water content (pizza, stuffed vegetables etc.), condensation can form inside the door and on the seal. When the oven is cool, dry the part inside the door with a cloth or sponge.
- Clean the glass on the door with an appropriate liquid cleaning product.
- The oven door may be removed to facilitate cleaning. The upper heating element on the grill (in certain models) can be lowered to clean the upper part of the oven.

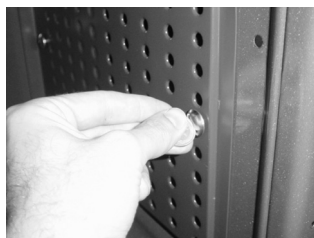

### Cleaning the runner grids and enamelled side panels

 - To clean the runner grids, remove them once the oven has cooled down (see figure)
- To clean the enamelled side panels (see figure), remove the runner grids as shown in the previous point and, using a coin or screwdriver, remove the screws holding on the panels (see figure).
- The enamelled panels can be washed with washing up liquid. Do not use rough sponges or scourers as this could damage the paint.
- Once dry, replace the enamelled side panels and grids, following the reverse procedure. The arrow symbol stamped onto each enamelled panel indicates the hole to use to fit them in properly.

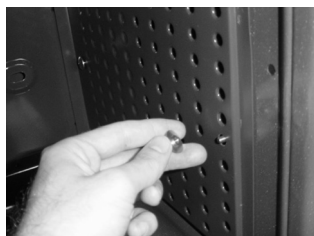

## Care and maintenance

**Warning:** use protective gloves for the following operations. Follow these instructions very carefully to prevent injury and damaging the oven door and hinges.

### How to remove the oven door:

1. Open the door fully (see fig. 1).
2. Lift the two catches and push them forward as far as they can go (see fig. 2).
3. Partially close the door to remove it, lifting it upwards (see fig. 3).

### How to remount the door:

1. Insert the hinges in their grooves and lower the door fully.
2. Lower the two catches again.
3. Fully close the oven door.

**Attention:** to prevent damaging the oven door and hinges as well as personal injury, follow the instructions above carefully. Clean it only after the oven has cooled down.

### To lower the upper grill heating element

- Remove the side runner grids.
- Pull the heating element slightly forward (fig. 4) and lower it (fig. 5).

### Changing the rear oven lamp bulb:

1. Disconnect the oven from the electrical supply.
2. Let the oven cool before turning the lamp cover left to unscrew it (see fig. 6).
3. Change the bulb (see note).
4. Screw the lamp cover back on.
5. Reconnect the oven to the electrical supply.

**Note:** only use 40 W - 230V lamps, such as E-14, T 300°C, available from the After Sales Service.

**Important:** do not use the oven without replacing the lamp cover.

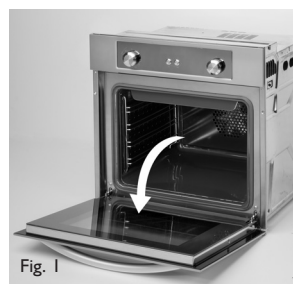 


Fig. 1

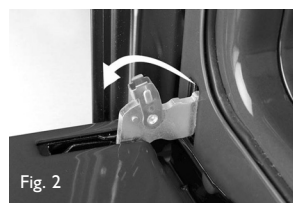 


Fig. 2

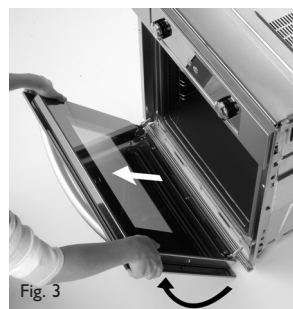 


Fig. 3



Fig. 4



Fig. 5




Fig. 6

# Troubleshooting guide

## Oven not working:

- Make sure there is a power supply and that the oven is connected to the mains supply.
- Turn the oven off and restart it to see if the fault persists.

## IMPORTANT:

- Make sure that the oven control knob is not turned to “0” or to the “lamp” symbol 
  - If the electronic programmer is showing “STOP”, consult the separate product description sheet and/or the description of the electronic programmer.
  - If the electronic programmer is showing “F XX”, contact the Customer Care Centre. In this case, specify the number following the letter “F”.

## After Sales Service

### Before contacting the Customer Care Centre:

1. Try to solve the problem yourself based on the descriptions given in the “Troubleshooting guide”.
2. Turn the appliance off and restart it to see if the fault persists.

### If after carrying out the above checks, the fault persists, contact the Customer Care Centre.

Please give:

- a short description of the fault;
- the exact model of the oven;
- the service number (this is the number found after the word Service on the rating plate), located on the internal edge on the right hand side of the oven opening (visible when the oven door is open). The service number can also be found in the warranty booklet;
- your full address;
- your telephone number.

If repair work has to be carried out, contact the **Customer Care Centre** (Use of original spare parts and a proper repair is guaranteed).

**Failure to comply with these instructions could compromise the safety and quality of your product.**



## DECLARATION OF CONFORMITY

- This oven was designed to come into contact with food stuffs and complies with EEC (CE) Regulation n. 1935/2004
- It was exclusively designed for use as a cooking appliance. Any other use of the appliances (e.g. heating rooms) is considered improper and subsequently dangerous.
- It was designed, produced and launched onto the market in compliance with:
  - safety objectives of the “Low Voltage” Directive 2006/95/CE (which replaces 73/23/CEE and subsequent amendments).
  - the safety requirements in the “EMC” Directive 89/336/EEC.
  - the requirements of Directive 93/68/EEC.

